




INSTALLATION DATA

ANS Z21.20


AUTO IGNITION SYSTEMS

NOTE: Install Snap-Fit™ Universal Thermocouple so the pilot burner flame envelopes top 3/8" to 1/2" of the tip.

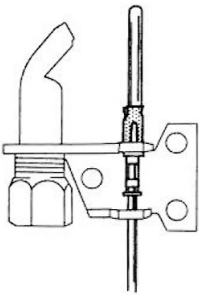


SLIM THERMOCOUPLE

Install in a clip-type bracket (requires no sheath).

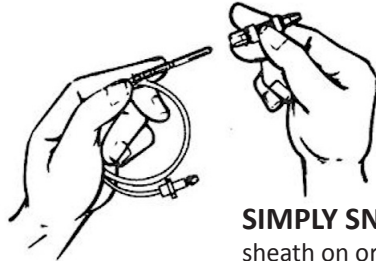


SIMPLY SNAP the sheath on or off, as the application requires.

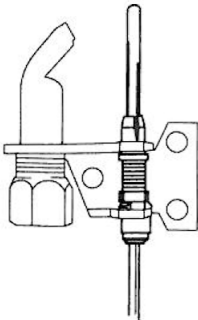

STANDARD THERMOCOUPLE

Install in a clip or screw-type bracket. Includes large clip and a thread pilot adaptor. Illustration shows sheath snapped into position. (The clip will hold the thermocouple firmly into position in either clip or screw-type bracket.)

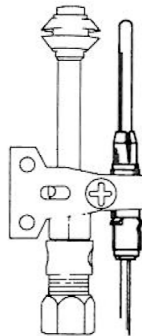

STANDARD THERMOCOUPLE

Installed in a clamp-type bracket. Illustration shows sheath snapped in to position.



191 E. North Avenue
Carol Stream Illinois 60188 USA
Customer Service
Telephone 1.800.304.6563
Facsimile 1.800.426.0804
HVACCustomerService@robertshaw.com

For Technical Service
Telephone 1.800.445.8299
Facsimile 1.630.260.7294
TechnicalService@robertshaw.com

Robertshaw®, Ranco®, Paragon® and Uni-Line® are trademarks of Robertshaw its subsidiaries and/or affiliated companies. All other brands mentioned may be the trademarks of their respective owners.

www.uni-line.com
www.robertshaw.com
©2014 Robertshaw
07/14 -1-950 RevB